Foam Wall Berm Installation

These are general installation instructions for foam wall berms. If you have a custom project or requirement, please see your team member for assistance.

STEP 1: (Optional) If a geotextile ground mat is being used, place this mat on the ground in the intended berm location. This mat should be positioned prior to unrolling the berm. (Fig 1)

STEP 2: Move the berm to your install location and unroll. When arriving to your location, berms should be folded, rolled and secured with a strap. Once in place, remove the strap and begin unrolling the berm. (Fig 2)

STEP 3: After the berm has been unrolled, unfold both sides until the berm is lying flat and the foam walls are in their intended position. (Fig 3)

STEP 4: Ensure that the grommets are not facing in.

STEP 5: If optional berm runners are being used, place them onto your berm. Runners should be laid out flat and placed over the foam walls where the vehicle will be entering and exiting the berm. Spacing for the runners should match the width of the tires on your vehicle. (Optional Drive Tracks pictured) (Fig 4)

STEP 6: Carefully drive your vehicle onto the berm. (Fig 5)



240-2015-11-1

(+1) 772.646.0597

(+1) 772.589.3343

info@geiworks.com